

# Road Closed Beyond Junction Detour


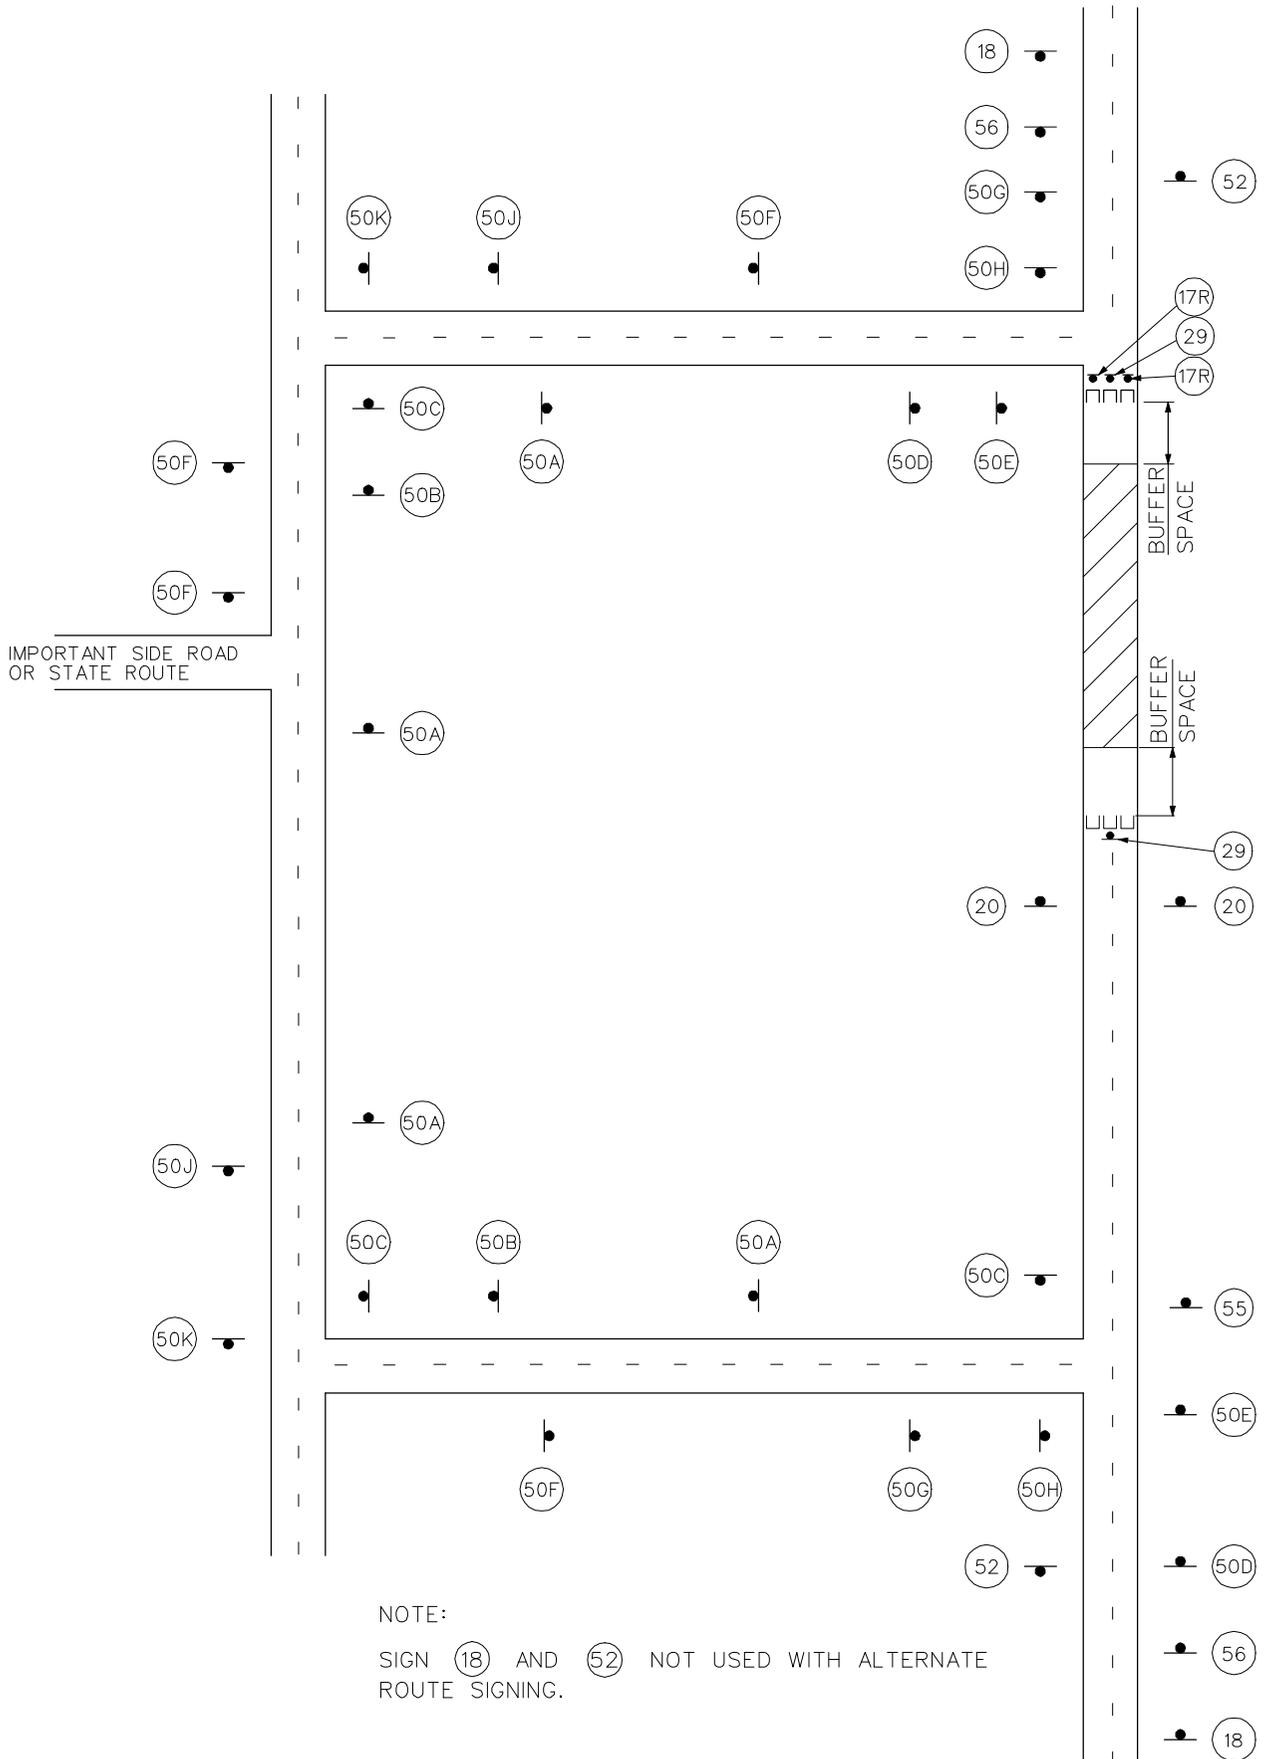


Figure 616.2.1

**Signs and Notes  
Detour**

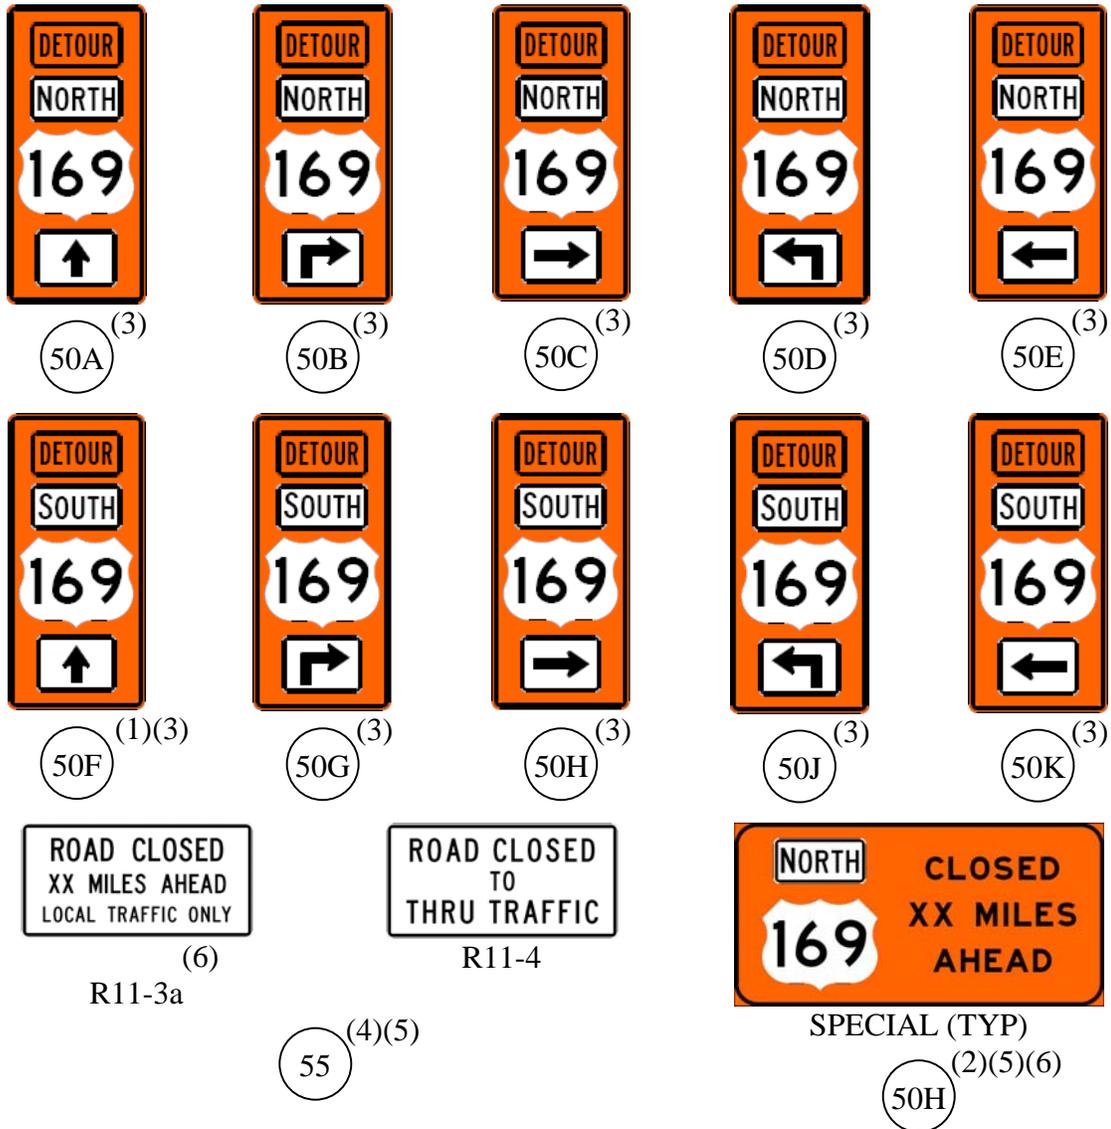

**NOTES:**

SEE FIGURE ??? FOR SIGN SPACING.

PCMS MAY BE USED IN ADDITION TO THIS SIGNING.

- (1) IN ADDITION TO THE LOCATIONS SHOWN, CONFIRMATION SIGNS SHOULD ALSO BE USED ALONG EXTENDED SECTIONS ON THE SAME ROUTE.
- (2) ADVANCE CLOSURE SIGN TO BE DESIGNED BY TRAFFIC DIVISION. SIGNS TO BE SHOWN ON THE PLANS AND LISTED UNDER "MISCELLANEOUS SIGNS" ON THE D-2BS SHEET.
- (3) REPLACE "DETOUR" WITH "ALTERNATE" FOR ALTERNATE ROUTE SIGNING.
- (4) USE R11-3a IN RURAL LOCATION AND R11-4 IN URBAN LOCATIONS.
- (5) SIGN NOT USED IN ALTERNATE ROUTE SIGNING.
- (6) DISTANCE ONLY SHOWN IF 1 MILE (1.5 KM) OR MORE TO CLOSURE.

**Route Assembly Signs  
Detour**



DETOUR ROUTE ASSEMBLY (NUMBERED ROUTE)  
TO BE USED FOR DETOURING OF INTERSTATE, US, AND MISSOURI  
NUMBERED ROUTES.



DETOUR ROUTE ASSEMBLY (LETTERED ROUTE)  
TO BE USED FOR DETOURING OF MISSOURI LETTERED ROUTES.



DETOUR ROUTE ASSEMBLY (LOCAL ROAD)  
TO BE USED FOR DETOURING OF OFF-SYSTEM STREETS AND ROADS.

**NOTES:**

REPLACE “DETOUR” WITH “ALTERNATE” FOR ALTERNATE ROUTE SIGNING.  
DETOUR ROUTE ASSEMBLIES WITH APPROPRIATE CARDINAL DIRECTIONS,  
ROUTE SHIELDS, AND DIRECTIONAL ARROWS TO BE DESIGNED BY TRAFFIC  
DIVISION.

SIGNS TO BE SHOWN ON THE PLANS AND QUANTIFIED ON THE D-2BS SHEET.